

**CHING<sup>®</sup>** Sports.com

**SKILL-SHOT<sup>™</sup>**

**DISC GOLF TARGET**



Package Includes: 16 Real Chains, Bright Golf Flag, Sturdy Tripod Base, Custom Carrying Case, Colorful Canopy Section & Matching Basket Section.

**\*\*\*\* RECOMMENDED AGES 10 & UP \*\*\*\***

**CAUTION:** ALWAYS KEEP HEADS, HANDS, FINGERS, AND FEET CLEAR FROM MOVING PARTS.

ADULT ASSISTANCE MAY BE REQUIRED FOR SETUP AND/OR BREAKDOWN.

**Congratulations on acquiring your CHING<sup>®</sup> Skill-Shot<sup>™</sup> Disc Golf Target!**

*PLAY DISC GOLF anywhere, anytime!  
The Skill-Shot<sup>™</sup> is perfect for the backyard or beach. Try playing the games described on the back of the box, or invent your own... it's all good!!!*

## Assembly & Setup Instructions:

Connect canopy-section pole with basket-section pole, aligning push-button with locking hole. Make sure chains hang straight down untangled before securing sections. Open tri-pod base, remove cap from main pole, slip bottom of main pole into top of tripod base aligning push-button with locking hole. Raise basket, raise canopy, add flag. You're ready to Play Disc Golf!


To collapse unit: Collapse canopy, collapse basket, remove flag. Slip cover over unit. Depress tripod pushbutton, pull covered assembly out of tripod and turn unit over so side pouch is upright. Place flag and tripod in pouch, tighten drawstring, replace end cap. You're completely portable!

**Canopy Section**

Attach poles with push button lock

**Basket Section**

Attach tripod with push button lock

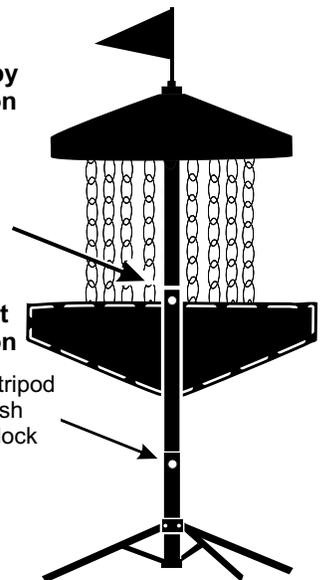

West Coast Sales  
11120 Tacoma Ave.  
Rancho Cucamonga, CA 91730  
(909) 481-6266  
www.innovadiscs.com

**SKILL-SHOT<sup>™</sup> DISTRIBUTION & SERVICE BY**



East Coast Sales  
P.O. Box 4979  
Rock Hill, SC 29732  
(800) 476-3968  
www.innovadiscgolf.com

# Care & Cleaning for the Skill-Shot™ DGT

**CAUTION:** ALWAYS KEEP HEADS, HANDS, FINGERS, AND FEET CLEAR FROM MOVING PARTS.


ADULT ASSISTANCE MAY BE REQUIRED FOR SETUP AND/OR BREAKDOWN.

## ***TO REMOVE and/or REPLACE SKINS***

- 1) Prepare a work area that will accommodate the target in the 'setup' position.
- 2) Partially collapse the basket to remove fabric tension.
- 3) Individually remove the looped endpoints at each basket rib.
- 4) Slide the skin off the center post, removing the tri-pod as necessary to take the basket skin off completely.

**\*\*** Repeat above steps for canopy section.

**\*\*\*** Attach skins by reversing the steps above.

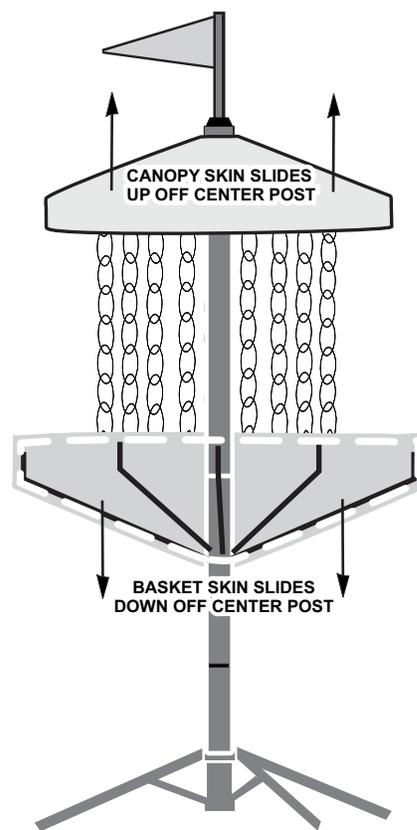

The **CHING**® Skill-Shot™ is designed to be **WEATHER RESISTANT**, but it is **NOT WEATHER PROOF**. You should always keep the unit stored in a cool dry place, and avoid using it in damp or rainy conditions. If necessary you may remove rust quickly with emery cloth and use WD-40, silicon spray, or other home use oil to keep the moving metal parts operating properly. Machine wash fabric skins in regular cycle using cold water and mild detergent. Tumble or air-dry. Do not use 'heated' washer or dryer settings.

The Skill-Shot™ is designed to handle normal use playing disc golf with heavy weight golf discs. That means it will catch an occasional 300 footer and countless rounds of typical approaches & putts, but it is not designed to withstand constant duress from aggressive putting practice or abuse from close range power shots. Be smart, respect your equipment and it will last for years.

\*\*\*One year warranty covers manufacturing defects only\*\*\*

**CHING**® Sports.com  
PO BOX 19602 ASHEVILLE, NC 28815